

Eleven collaborative assembly

---





## Table of contents

Support brace assembly	3
Table base frame assembly	4
Leg attachment	5
Top joining plate assembly	6
Top clamp/top spacer installation	7
Top placement and connection	8
Top attachment	9
Table base parts list	10-25
- Triangular table base	
- Round table base	
- Square table base	
- Rectangular table base	
- Trapezoid table base	
- Boat table base-	

## Support brace assembly

### Tools/hardware required:


5mm allen wrench

### Notes:

- Use these instructions for: Trapezoid tables (96x72), all boat tables
- Frame is assembled upside down.
- Frame is to be flipped over after legs are installed.

### Instructions:

1. Position support brace so counter-sunk holes in outside leg insert rail are aligned with the holes on end of support brace. **(Figure A)**
2. Insert flat head cap screws and tighten with 5mm allen wrench. **(Figure A detail)**

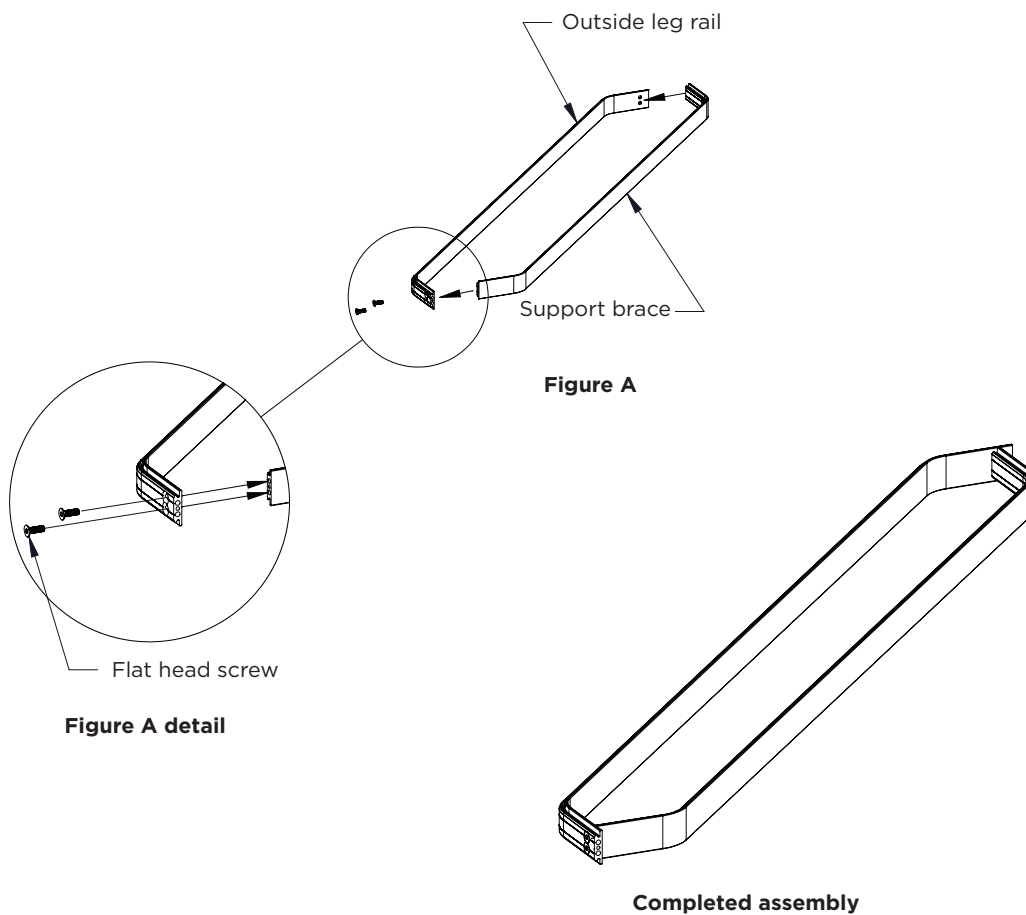

## Table base frame assembly

### Tools/hardware required:


5mm allen wrench

### Notes:

- Use these instructions for: Rectangular tables (96" w and wider), boat tables (96" w and wider).
- Frame is assembled upside down.
- Frame is to be flipped over after legs are installed.

### Instructions:

1. Position double top support rail and single top support rail so counter-sunk holes in inside leg insert rail are aligned with the holes on end of support rails.
2. Insert flat head cap screws and tighten with 5mm allen wrench.
3. Loosen bolts in support rail clamp with 5mm allen wrench and position on support rails where indicated on the [assembly master illustration](#).
4. Clamp onto rails and **securely tighten** bolts.
5. Install required rail on opposite end of rails.

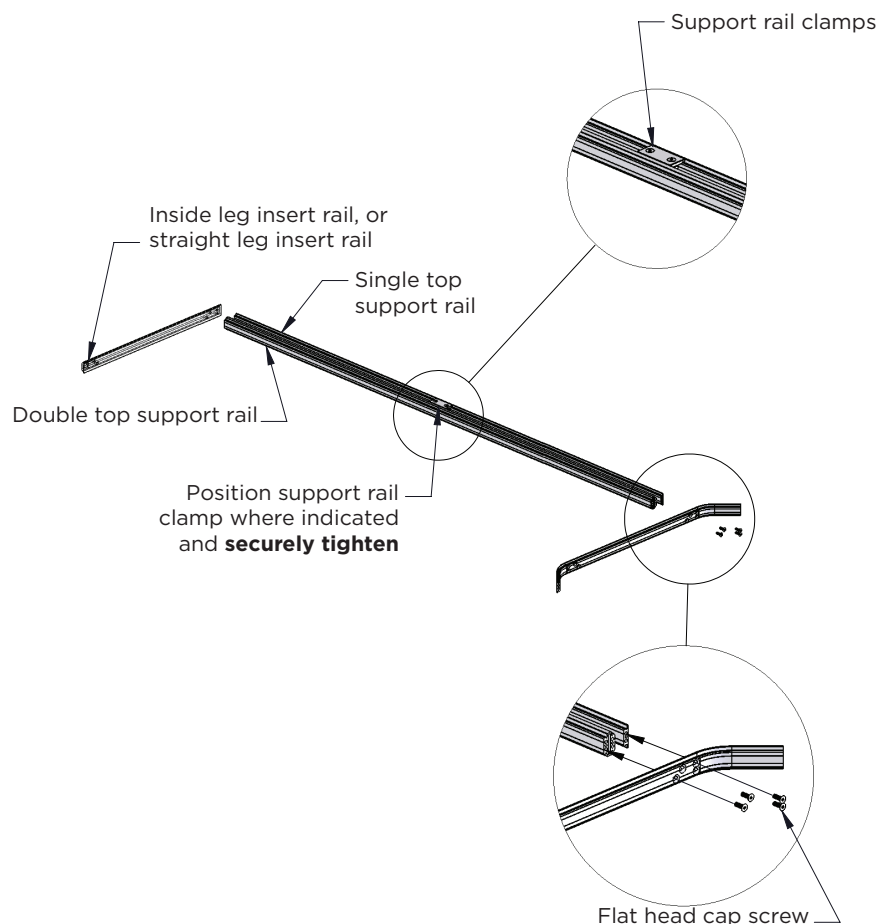

## Leg attachment

### Tools/hardware required:

5mm allen wrench

### Notes:

- This step is not used on all tables. Refer to list below for applicable models.
- Frame is assembled upside down.
- Frame is to be flipped over after legs are installed.

### Instructions: (Figure A)

**Use these instructions for:** Rectangular tables (84" w and smaller), trapezoid tables, square tables, round tables, triangular tables

1. Use 5mm allen wrench to loosen leg bolts. **Note:** Do not remove bolts.
2. Slide leg between rails until leg bottoms out leaving no gap.
3. Tighten bolts.

### Instructions: (Figure B)

**Use these instructions for:** Rectangular tables (96" w and wider)

1. Use 5mm allen wrench to loosen leg bolts. **Note:** Do not remove bolts.
2. Slid leg between rails until leg bottoms out leaving no gap.
3. Tighten bolts.

**Note:** On larger tables with six legs, center legs are inserted into straight leg rails..

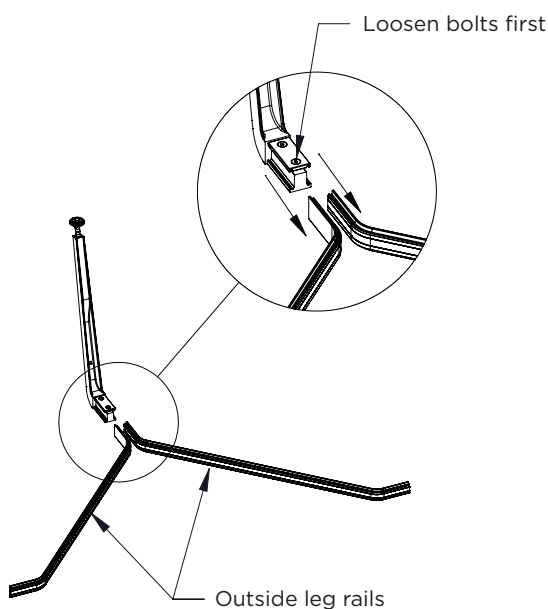


Figure A

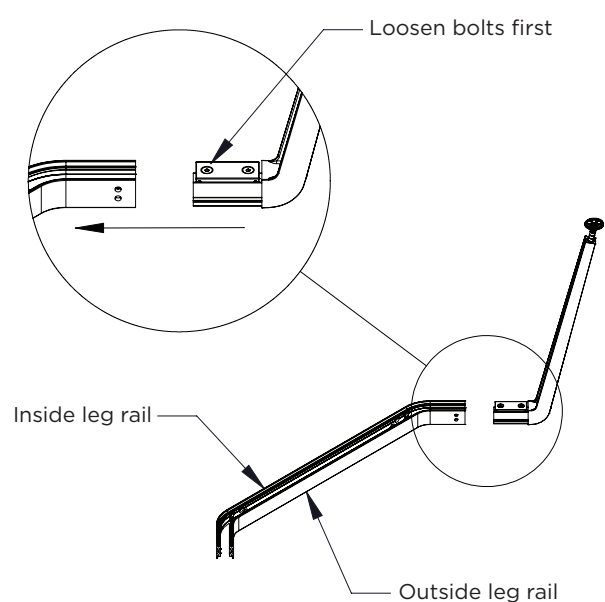


Figure B

## Top joining plate assembly

### Tools/hardware required:

5mm allen wrench

### Notes:

- This step is not used on all tables. Refer to list below for applicable models.
- Flip assembled frame over to rest on feet at this time.
- All top joining plates are pre-assembled with clamps bolted in place.

### Instructions:

**(Figure A)** Rectangular tables (120x42, 120x48), square tables (66"w and 72"w), and trapezoid tables


**(Figure B)** Boat shaped table (96x48, 108x48, and 120x48)

1. Clip joining plates to inside faces of double and single support rails.
2. Position plates so they are at the mid-point of the rails.
3. Tighten clamps with 5mm allen wrench.


### Instructions: (Figure C)

**Use these instructions for:** All other tables with 2 piece tops


1. Clip joining plates to inside faces of straight leg insert rails (between the rails).
2. Slide plates outward as far as they will go.
3. Tighten clamps with 5mm allen wrench.

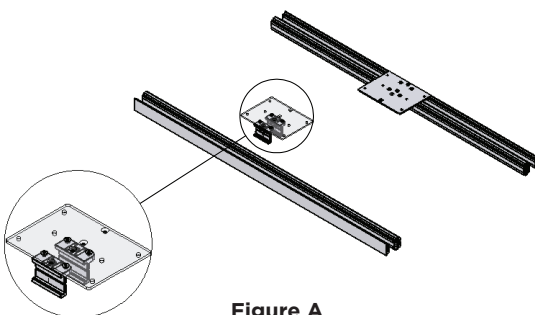

**Figure A**

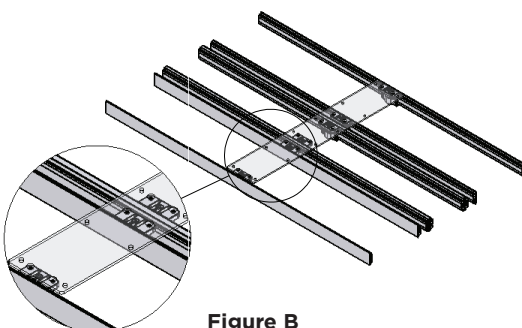

**Figure B**

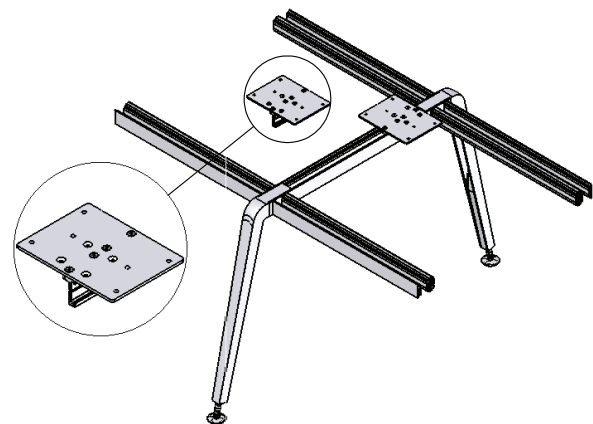

**Figure C**


## Top clamp/top spacer installation

### Tools/hardware required:


5mm allen wrench

### Instructions:

1. Snap top clamps onto rails where shown on [assembly master illustration](#).
2. Flat surface of top clamp faces up. **(Figure A)**
3. When correctly positioned, tighten top clamps (without over-tightening) using 5mm allen wrench.
4. Peel off adhesive backers on top spacers and adhere one on each leg. **(Figure B)**

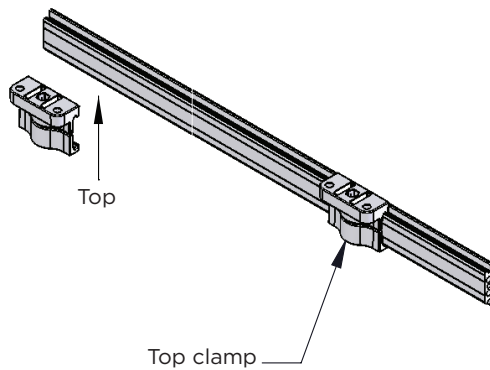

**Figure A**

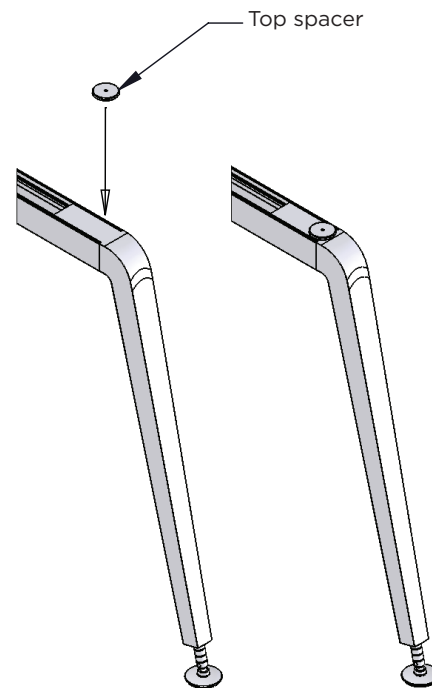

**Figure B**

## Top placement and connection

### Tools/hardware required:

7/16" wrench

### Instructions:

1. Place top on frame. **Note:** Two piece tops need to be placed so there is access to routes for joint fasteners on bottom side of top. **(Figure A)**
2. Connect two halves of top together using joint fasteners in routed out sections on connecting edges. **(Figure B)**
3. Tighten with 7/16" wrench

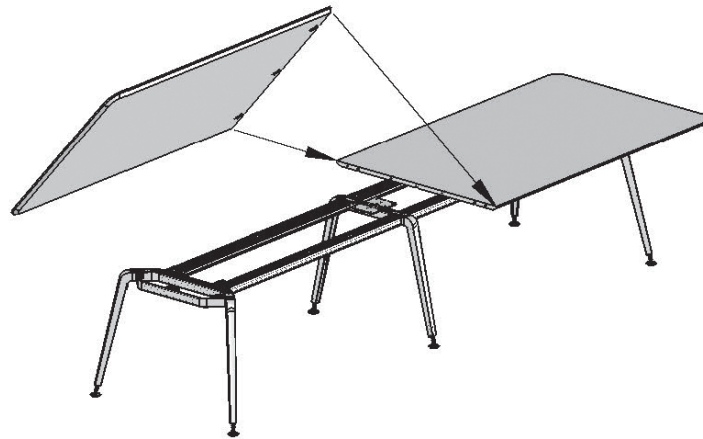


Figure A

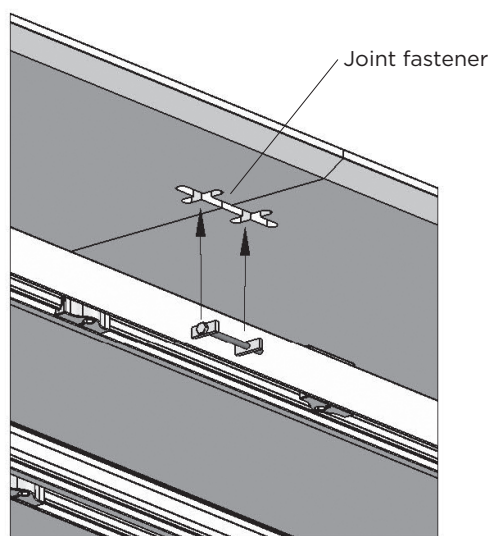


Figure B



## Top attachment

### Tools/hardware required:

Phillips screw driver

### Instructions:

1. Position top so it is centered on the base. **(Figure A)**
2. Use two #8 x 1" truss head screws per top clamp to secure the top to the base. **(Figure B)**
3. If needed, use the same screws to fasten top joining plate to top.

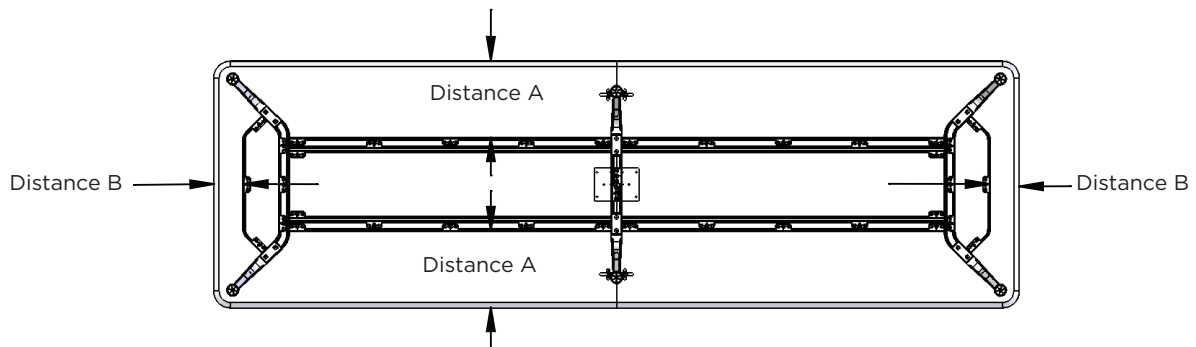


Figure A

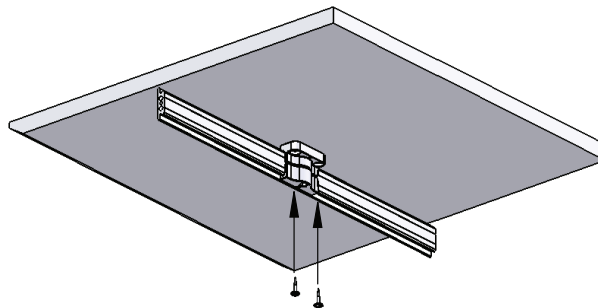


Figure B



## Triangular table base

Models: EN-4242PTB

Item #	Description	Qty.
1	Leg	3
2	Outside Leg Rail	3
3	Top Spacer	3
4	Top Clamp	6

Models: EN-6060PTB

Item #	Description	Qty.
1	Leg	3
2	Outside Leg Rail	3
3	Top Spacer	3
4	Top Clamp	9

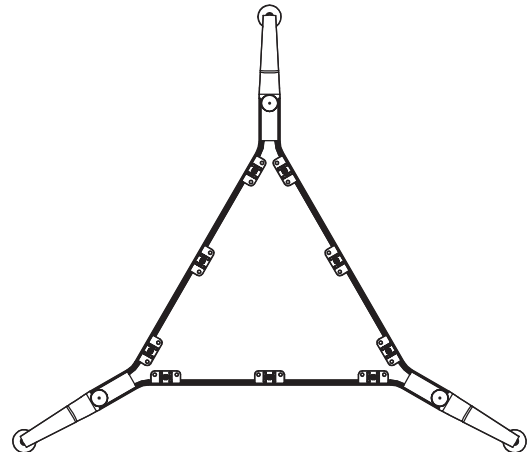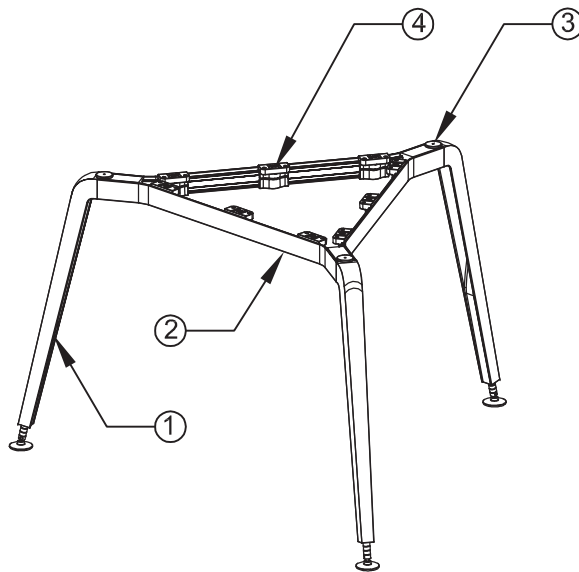

## Round table base

Models: EN-4242RTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	4
3	Top Spacer	4
4	Top Clamp	4

Models: EN-4848RTB, EN-5454RTB

Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	4
3	Top Spacer	4
4	Top Clamp	8

Models: EN-6060RTB, EN-6666RTB, EN-7272RTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	4
3	Top Spacer	4
4	Top Clamp	12

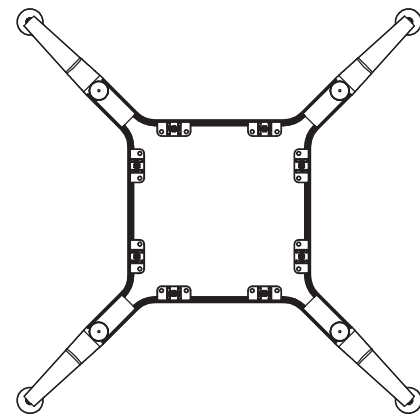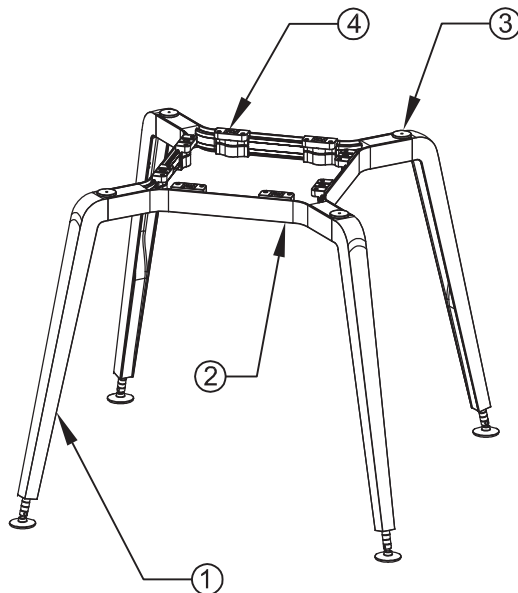

## Square table base

Models: EN-4848STB, EN-5454STB, EN-6060STB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	4
3	Top Spacer	4
4	Top Clamp	12

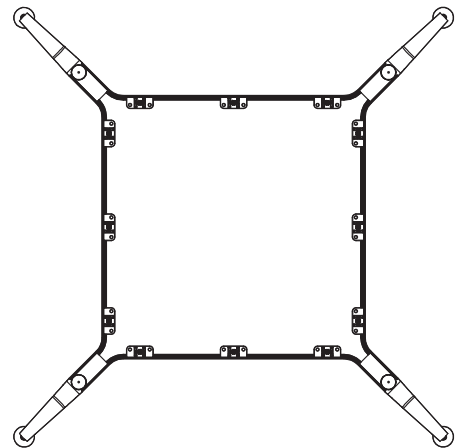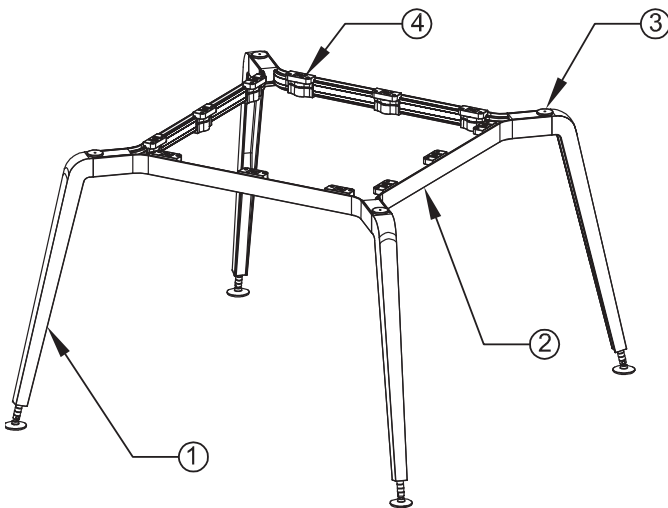

## Square table base, continued

Models: EN-6666STB, EN-7272STB

Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	4
3	Top Joining Plate	2
4	Top Spacer	4
5	Top Clamp	16

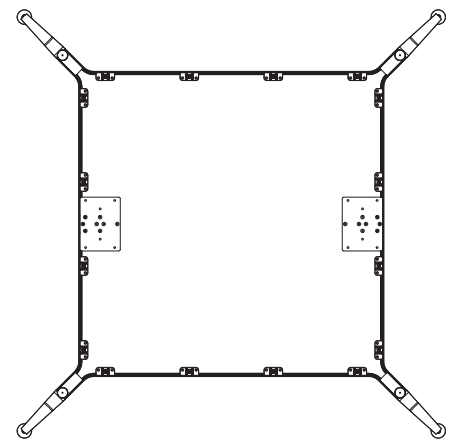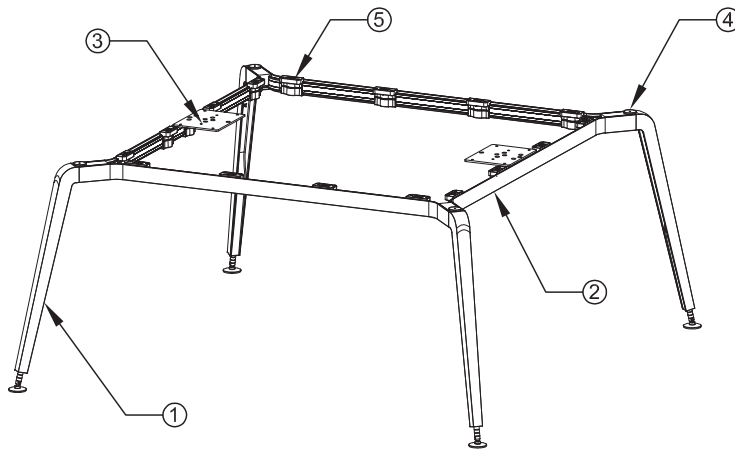

## Rectangle table base

Models: EN-6030RTB

Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	2
4	Top Spacer	4
5	Top Clamp	8

Models: EN-7230RTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	2
4	Top Spacer	4
5	Top Clamp	10

Models: EN-7236RTB, EN-7242RTB,  
EN-8442RTB

Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	2
4	Top Spacer	4
5	Top Clamp	12

Models: EN-7248RTB, EN-8448RTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	2
4	Top Spacer	4
5	Top Clamp	14

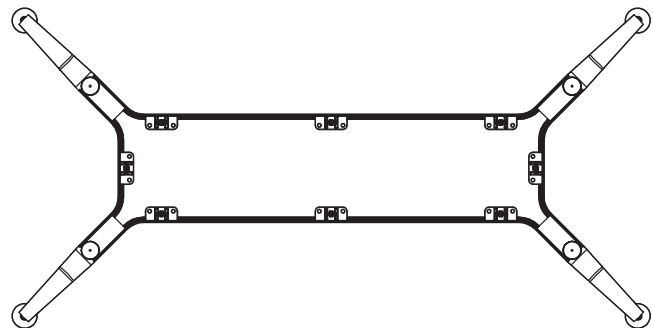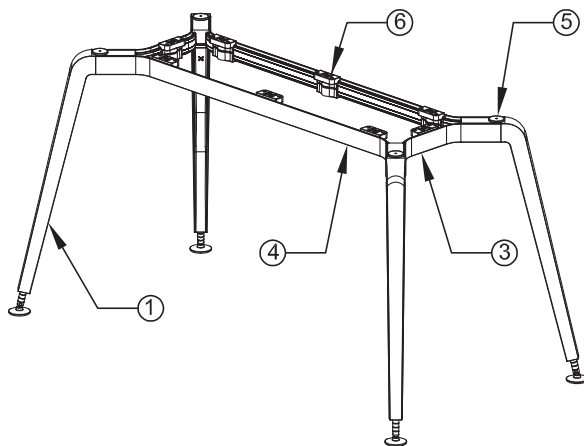

## Rectangle table base, continued

Models: EN-9642RTB, EN-9648RTB, EN-10842RTB, EN-10848RTB

Item #	Description	Qty.
1	Leg	4
2	Double Top Support Rail	2
3	Single Top Support Rail	2
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Support Rail Clamp	2
7	Top Spacer	4
8	Top Clamp	26

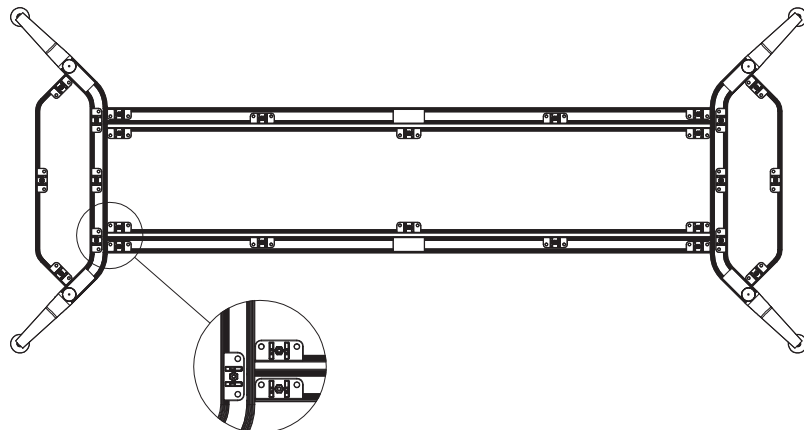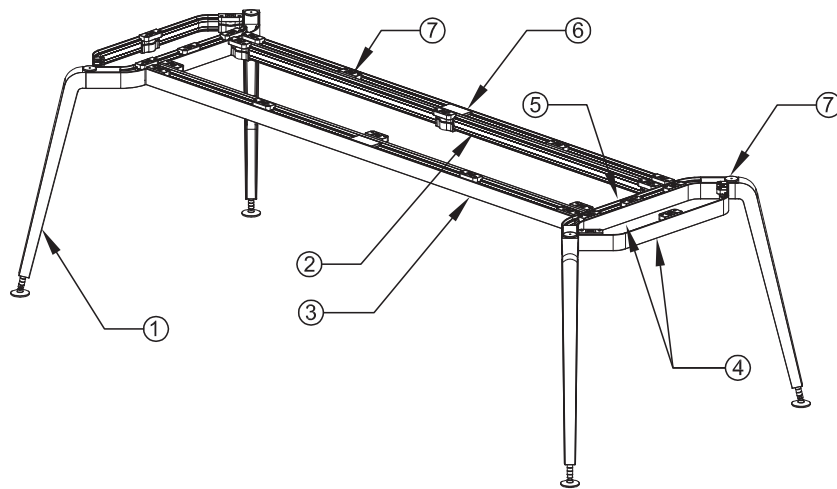


## Rectangle table base, continued

Models: EN-12042RTB, EN-12048RTB

Item #	Description	Qty.
1	Leg	4
2	Double Top Support Rail	2
3	Single Top Support Rail	2
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Support Rail Clamp	4
7	Top Joining Plate	2
8	Top Spacer	4
9	Top Clamp	28

Models: EN-12054RTB, EN-12060RTB

Item #	Description	Qty.
1	Leg	4
2	Double Top Support Rail	2
3	Single Top Support Rail	2
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Support Rail Clamp	4
7	Top Joining Plate	2
8	Top Spacer	4
9	Top Clamp	32

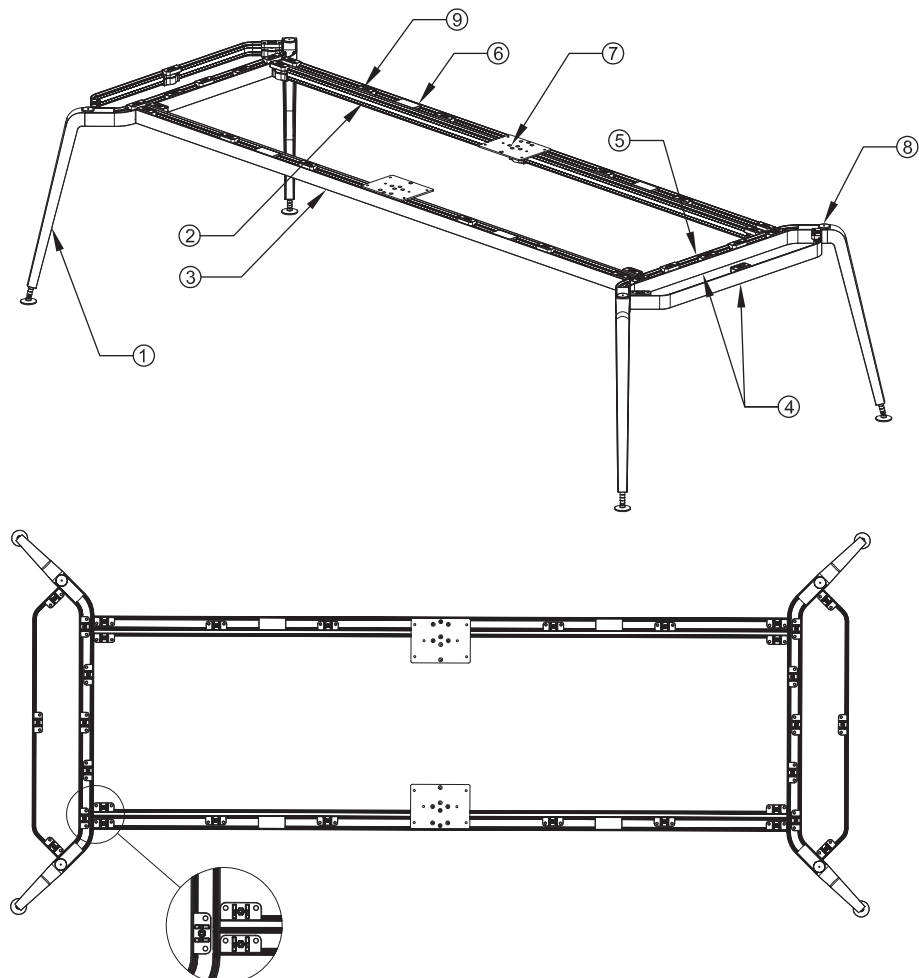




## Rectangle table base, continued

Models: EN-13242RTB, EN-14442RTB

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Support Rail Clamp	2
7	Top Joining Plate	1
8	Top Spacer	6
9	Top Clamp	36

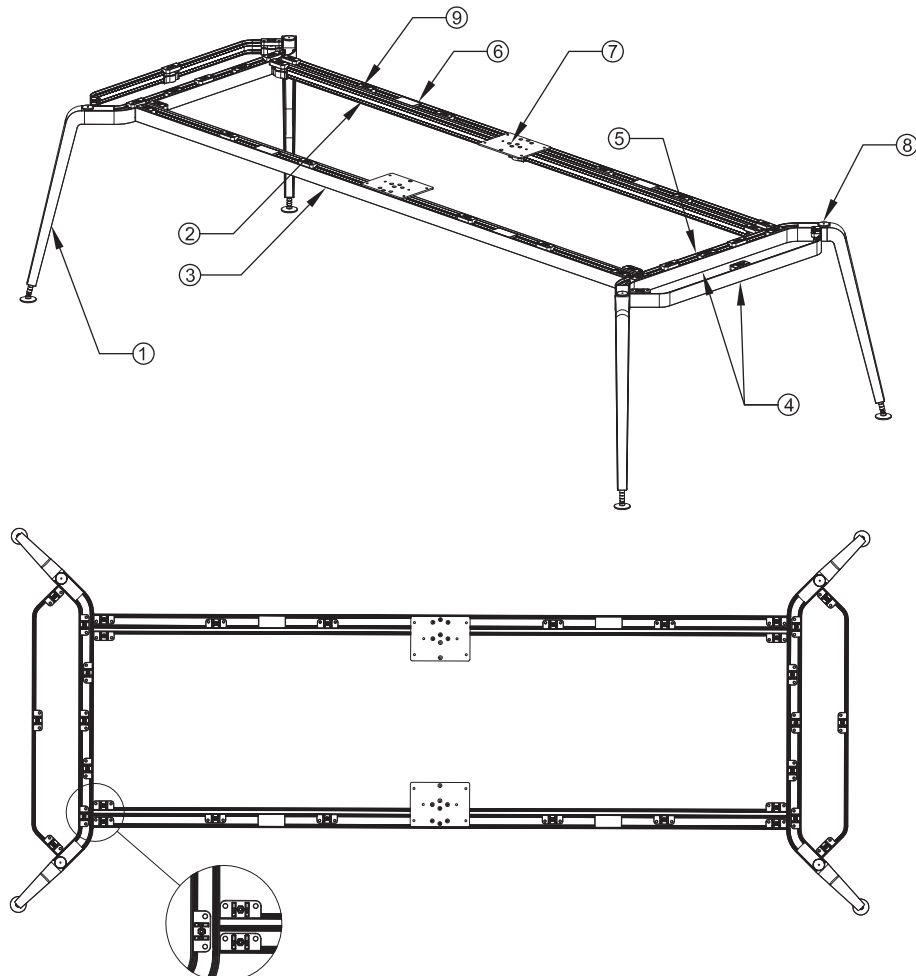



## Rectangle table base, continued

Models: EN-13248RTB, EN-14448RTB

Models: EN-13254RTB, EN-13260RTB,  
EN-14454RTB, EN-14460RTB

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Straight Leg Rail	2
7	Top Joining Plate	2
8	Top Spacer	6
9	Top Clamp	36

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Straight Leg Rail	2
7	Top Joining Plate	2
8	Top Spacer	6
9	Top Clamp	40

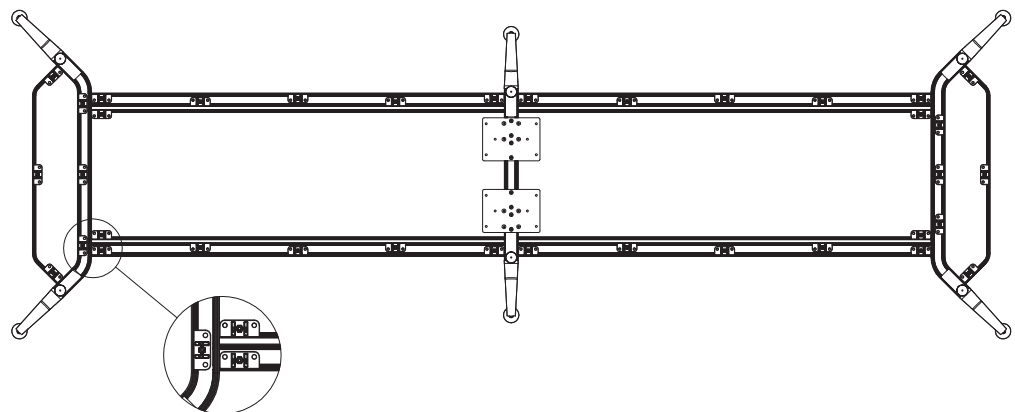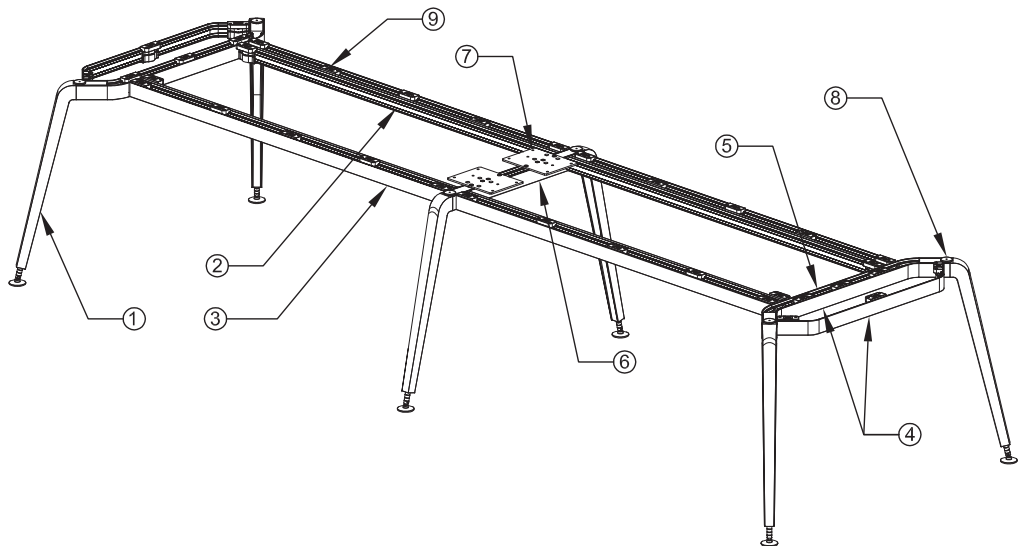



## Rectangle table base, continued

Models: EN-15642RTB, EN-16842RTB,  
EN-18042RTB, EN-19242RTB, EN-20442RTB,  
EN-21642RTB

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Straight Leg Rail	2
7	Support Rail Clamp	4
8	Top Joining Plate	1
9	Top Spacer	6
10	Top Clamp	36

Models: EN-15648RTB, EN-16848RTB,  
EN-18048RTB, EN-19248RTB, EN-20448RTB,  
EN-21648RTB


Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Straight Leg Rail	2
7	Support Rail Clamp	4
8	Top Joining Plate	2
9	Top Spacer	6
10	Top Clamp	36

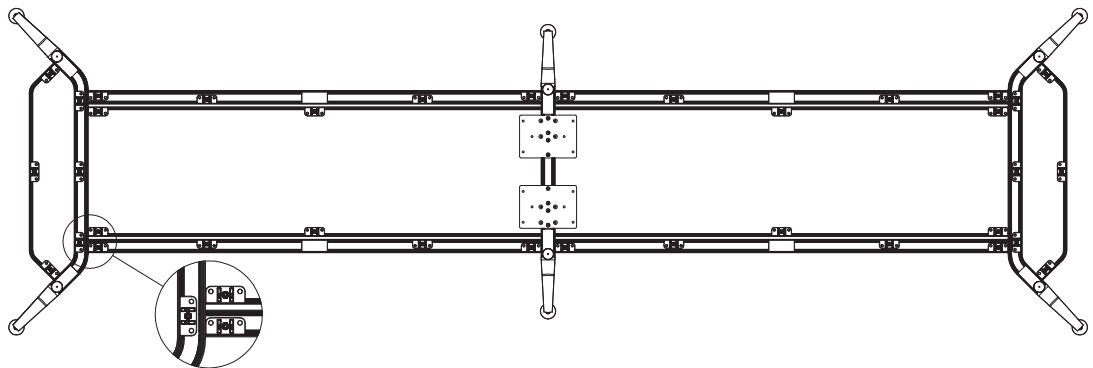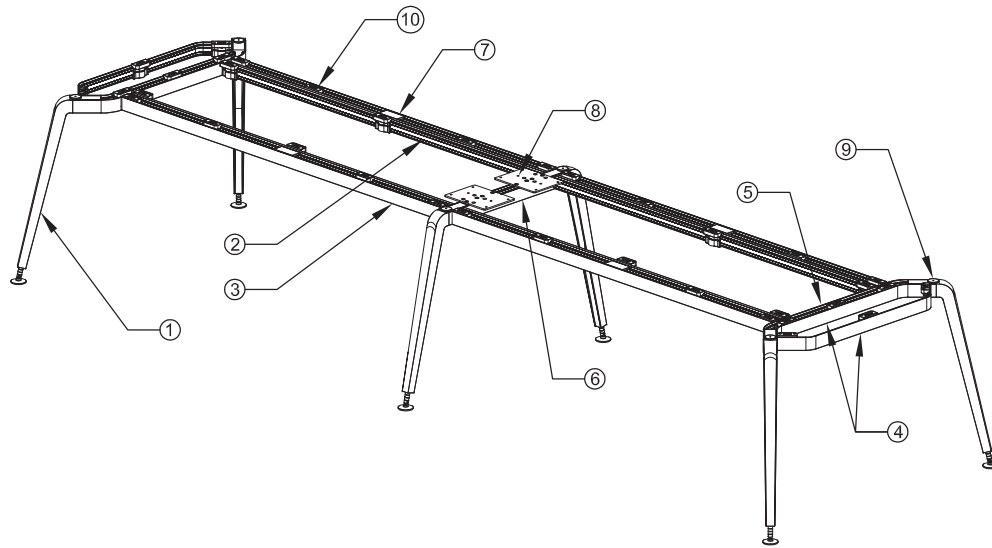

## Rectangle table base, continued

Models: EN-15654RTB, EN-15660RTB, EN-16854RTB, EN-16860RTB, EN-18054RTB, EN-18060RTB, EN-19254RTB, EN-19260RTB, EN-20454RTB, EN-20460RTB, EN-21654RTB, EN-21660RTB



Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Single Top Support Rail	4
4	Outside Leg Rail Assembly	2
5	Inside Leg Rail	2
6	Straight Leg Rail	2
7	Support Rail Clamp	4
8	Top Joining Plate	2
9	Top Spacer	6
10	Top Clamp	40

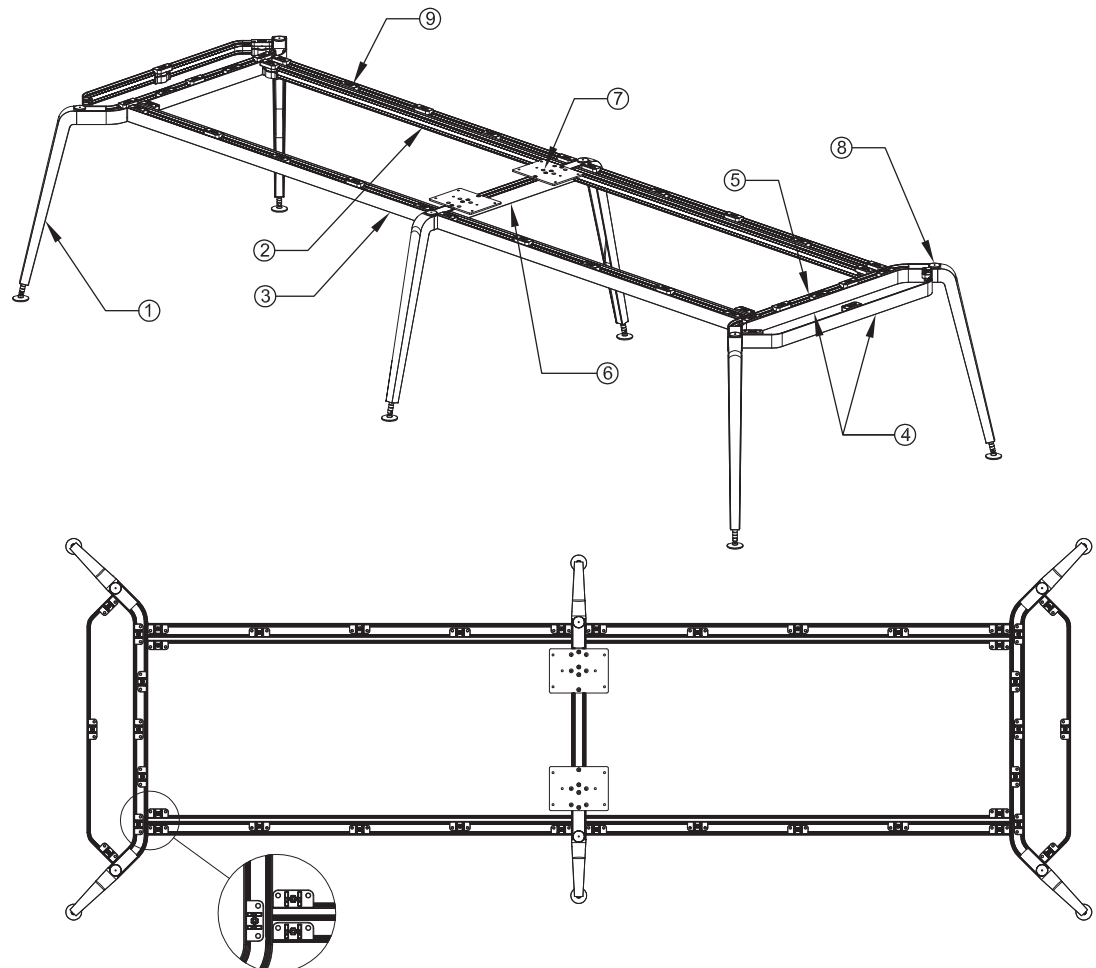

## Trapezoid table base

Models: EN-7272TZTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	1
4	Outside Leg Rail	1
5	Top Joining Plate	2
6	Top Spacer	4
7	Top Clamp	10

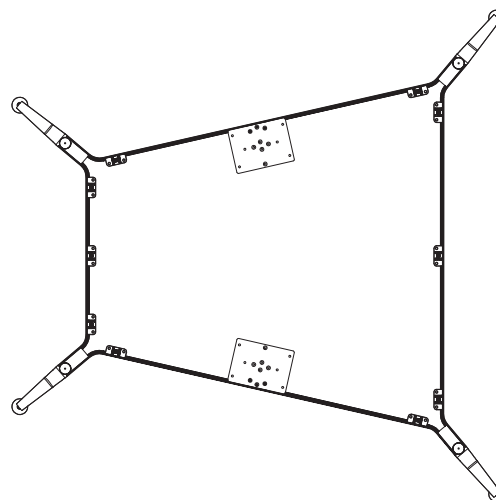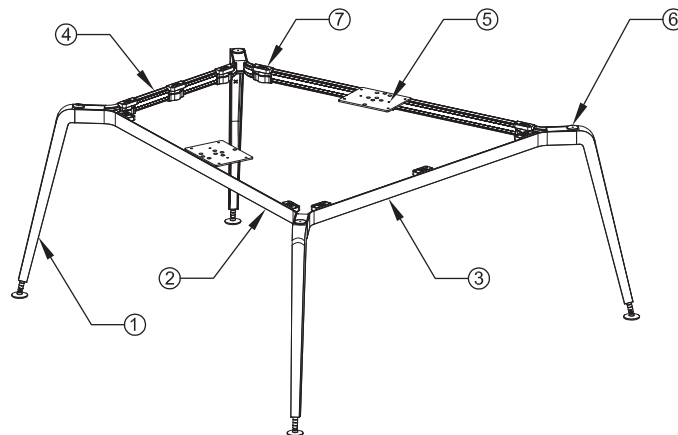

## Trapezoid table base, continued

Models: EN-9672TZTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	1
4	Outside Leg Rail	1
5	Support Brace	2
6	Top Joining Plate	2
7	Top Spacer	4
8	Top Clamp	24

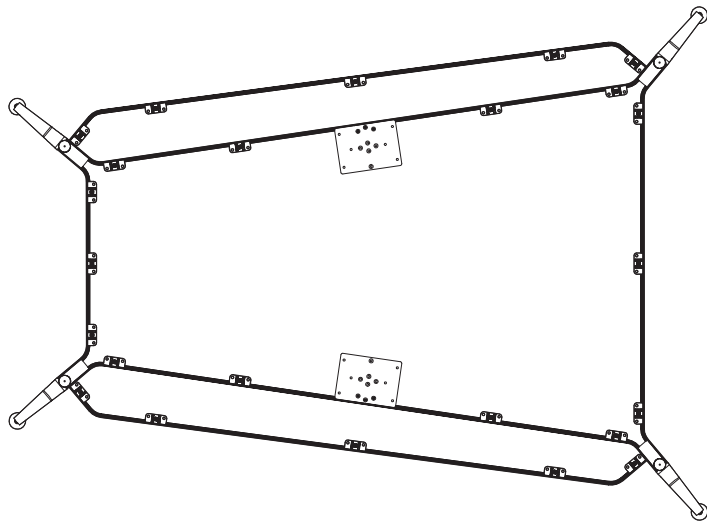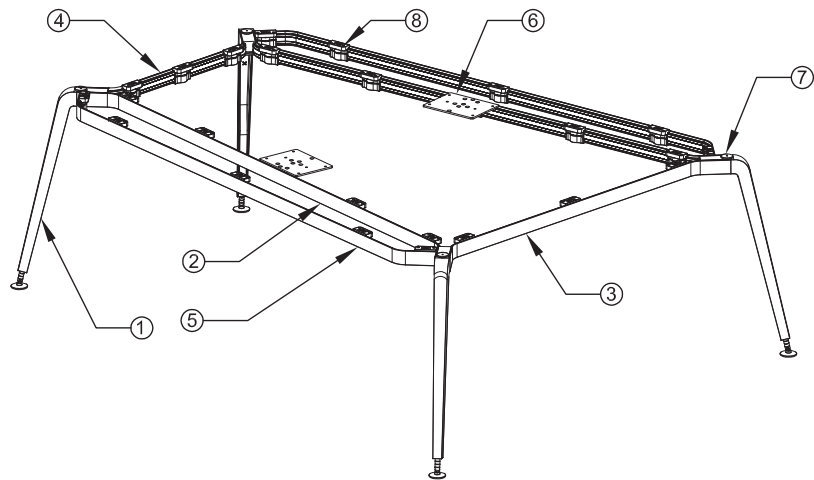

## Boat table base

Models: EN-8442BTB



Item #	Description	Qty.
1	Leg	4
2	Outside Leg Rail	2
3	Outside Leg Rail	2
4	Support Brace	2
5	Top Spacer	4
6	Top Clamp	18

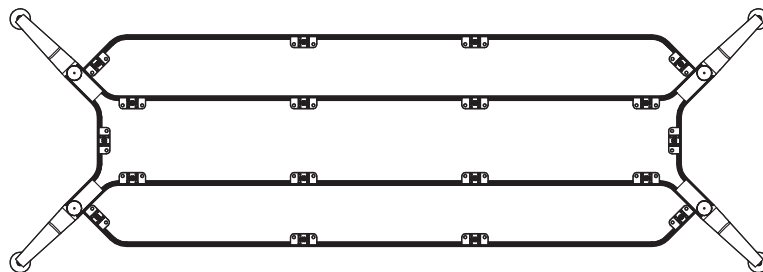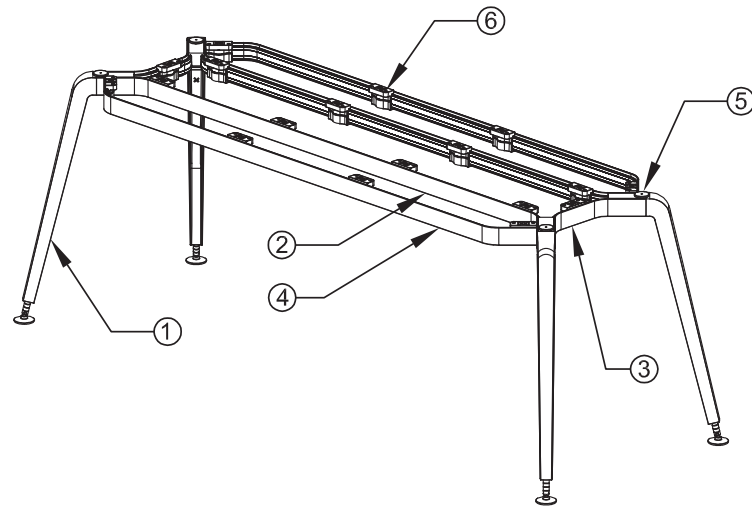

## Boat table base, continued

Models: EN-9648BTB, EN-10848BTB, EN-12048BTB

Item #	Description	Qty.
1	Leg	4
2	Double Top Support Rail	2
3	Single Top Support Rail	2
4	Support Brace	2
5	Outside Leg Rail	2
6	Inside Leg Rail	2
7	Top Joining Plate	1
8	Top Spacer	4
9	Top Clamp	28

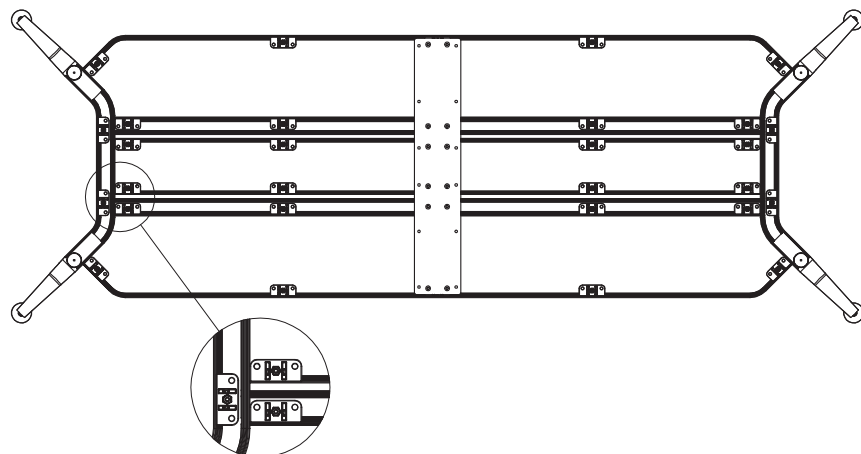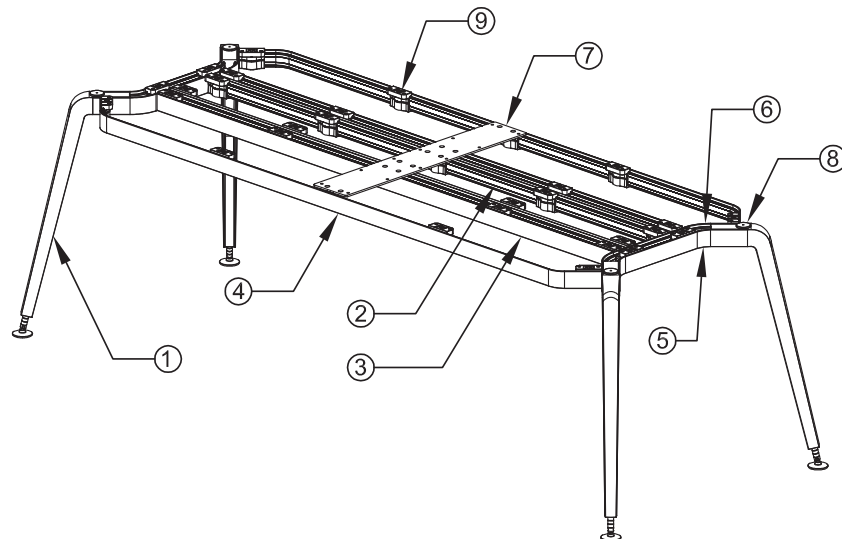



## Boat table base, continued

Models: EN-14454BTB

Models: EN-16854BTB, EN-19254BTB

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Outside Leg Rail	2
4	Inside Leg Rail	2
5	Straight Leg Rail	2
6	Support Brace	4
7	Support Rail Clamp	1
8	Top Joining Plate	2
9	Top Spacer	6
10	Top Clamp	38

Item #	Description	Qty.
1	Leg	6
2	Double Top Support Rail	4
3	Outside Leg Rail	2
4	Inside Leg Rail	2
5	Straight Leg Rail	2
6	Support Brace	4
7	Support Rail Clamp	1
8	Top Joining Plate	2
9	Top Spacer	6
10	Top Clamp	46

